
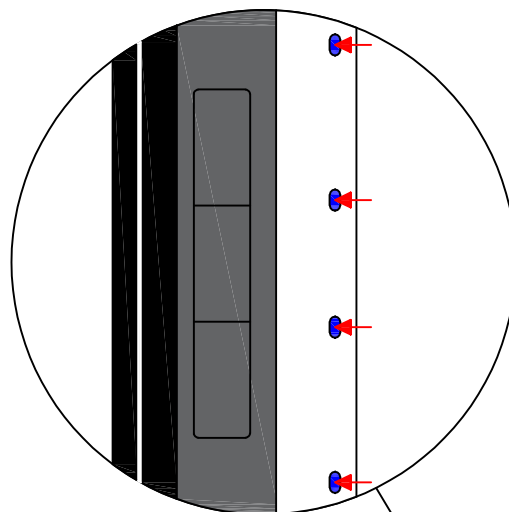


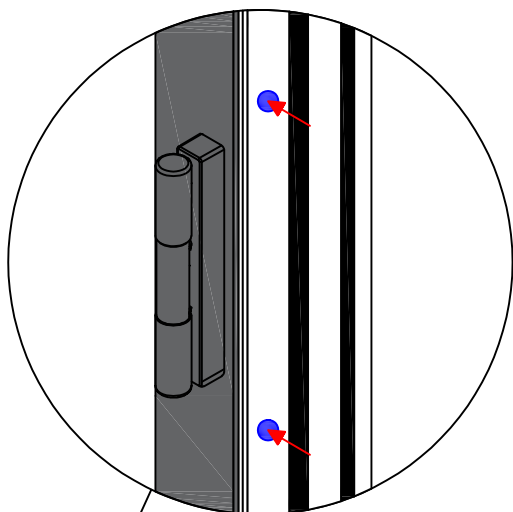

Fastening Method for:

88 Outswing Door
88 Inswing Door
76 Inswing Door with Flange
76 Inswing Door without Flange
76 Outswing Door without Flange

Before fastening through the frame make sure door has been shimmed and levelled.

Instructions:

Using the 2 screws supplied fasten through pre-drilled holes near top hinge. When you hit the RO you will get push back, reverse the drill and go in again.

— — — — —
Rough Opening (RO)

Shims

Screw Channels

Fastening Method for:

76 Outswing Door with Flange


Before fastening through the flange make sure door has been shimmed and levelled.

Instructions:


Using four screws fasten through pre-drilled holes on flange near top hinge.

INSWING APPLICATIONS


88TS Inswing Door

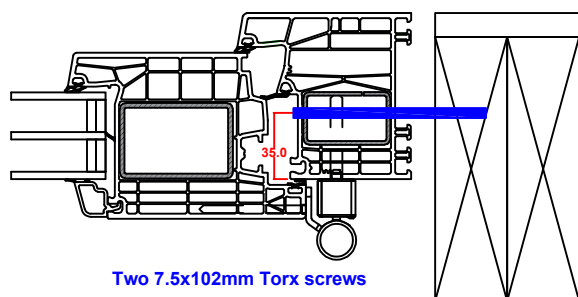

76TS Inswing Door with Flange

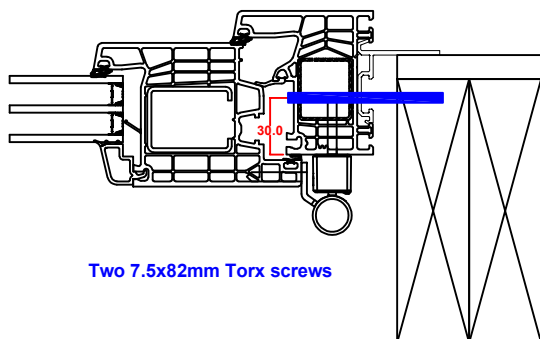


76TS Inswing Door without Flange

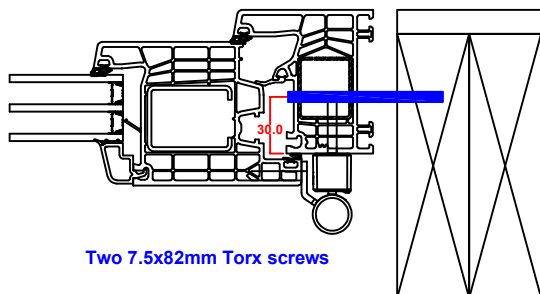


OUTSWING APPLICATIONS

88TS Outswing Door

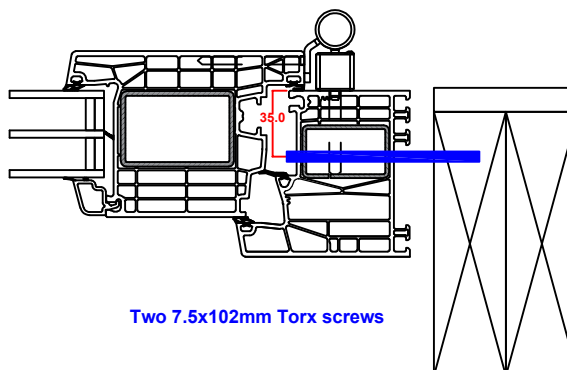

76TS Outswing Door with Flange

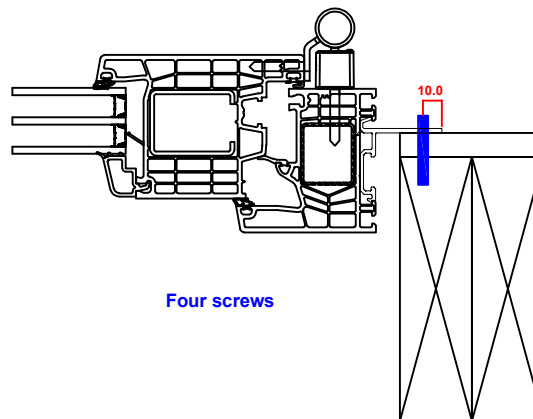

76TS Outswing Door without Flange

